
Instruction Manual for TF Receivers

1. TF Receivers

Read the instruction manual and set up the devices as described below.



1.1 Compatibility:

FASST 2.4G System (TM7, TM8, TM10, TM14, etc)
FrSky TF Module (TF-8M, TF-14M)

1.2 Specifications:

Number of channel: 8
Operating Voltage Range: 4V~10V
Dimension: 53mm*30mm*11mm
Weight: 13.5g
Latency: 14ms (FS)
7ms (HS)

2. Setup

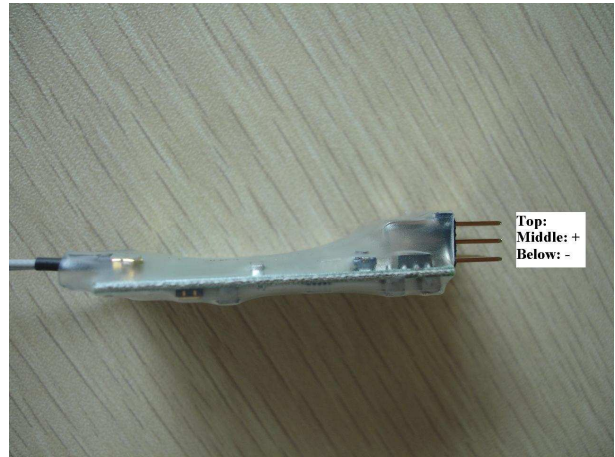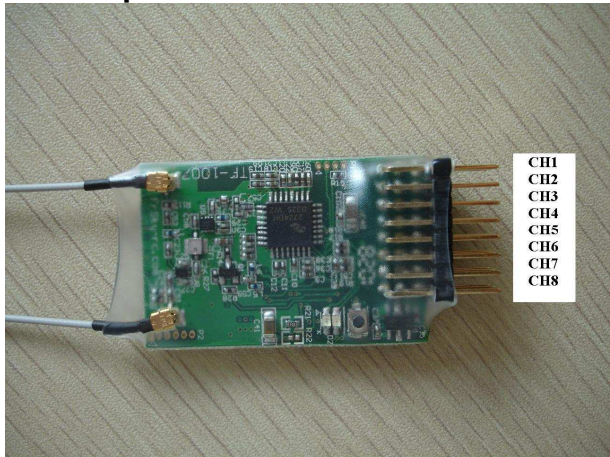

2.1 Bind procedure:

Turn on the transmitter, connect the battery to the receiver while pressing receiver's F/S button. After the RED LED is off and GREEN LED is solid, the binding process is completed and working mode is activated.

2.2 Setting failsafe:

TF series receivers support failsafe function for all channels.

After the receiver has been bind, press briefly the F/S button of the receiver, the GREEN LED of the receiver will flash twice, the failsafe is set up successfully.

If you do not need the failsafe function any more, just re-bind the receiver to set default failsafe mode.

2.3 LED status:

RED LED	GREEN LED	Mode
Off	On	Working mode
On	On	Waiting to be bind
Flash	On	Signal lost
On	Flash twice	Set failsafe

3. How to switch between two PPM modes

Turn the transmitter off, connect the battery to the receiver, press the F/S button of receiver for 6 seconds and then release. The red LED will flash fast in HS Mode and slow in FS Mode.